



LIGHTED FORK TOWER ACCENTS 7445

FOR GL1800

FITS: ALL '01-UP GL 1800 (EX. AIRBAG MODELS)

Note: '06-up GL 1800's require P/N 7300 for plug and play installation

PARTS INCLUDED

- 1 Right Fork tower Accent
- 1 Left Fork Tower Accent
- 1 Hardware Kit Including:
 - 4 4-40 x 3/8 Pan Head Screws
 - 2 Y-adapters
 - 2 Black Nylon Male Connectors
 - 4 4" Cable Ties
 - 1 Dielectric Grease Pack
 - 1 Left Drill Fixture
 - 1 Right Drill Fixture
 - 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, 1/8" & 3/16" drill bits, drill, masking tape.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE


ATTENTION! This procedure requires making permanent modifications to the fender; this may void your warranty. Consult your dealer for more information.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the four screws that secure the front fender as shown in FIG. 1; these screws will be used again.

-cont.-

FIG. 1

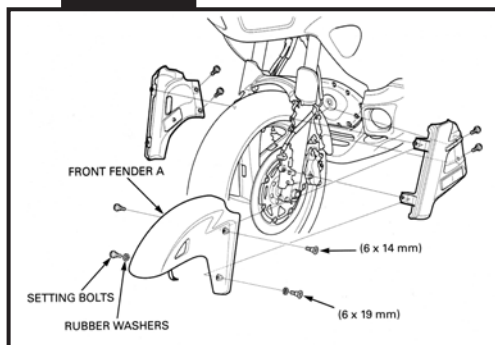

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 3 Refer to [PIC. 1](#) to determine the left drill fixture.

STEP 4 Place the left drill fixture on the fender as shown in [PIC. 2](#), so that the alignment tab is in the screw hole of the fender and secure the fixture to the fender using masking tape.

STEP 5 Using a 1/8" drill bit, drill a hole through the fender, using the three drill guides ([PIC. 1](#)) in the drill fixture; be sure to center the drill bit in drill guides in the fixture.

STEP 6 Using a 3/16 drill bit, drill a hole through the fender using the forward drill guide of the drill fixture as shown in [PIC. 2](#).

STEP 7 Remove the template from the fender.

STEP 8 Repeat STEP 3 through STEP 7 for the right side.

STEP 9 Clean the left side of the fender as shown in [PIC. 3](#) with the included alcohol cleaning pad and allow the area to dry.

STEP 10 Refer to [PIC. 4](#) to determine the left accent; feed the wire from the accent piece through the 3/16" hole in the fender.

STEP 11 Using the back of your fingernail, rub the backing of the adhesive on the accent piece to activate the catalyst.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50° F. Do not attempt this installation in temperatures less than 50° F.

STEP 12 Remove the backing from the adhesive and place the accent piece on the fender and secure using two 4-40 x 3/8 pan head screws. ([PIC. 5](#))

STEP 13 Repeat STEP 9 through STEP 12 for the right side.

STEP 14 Reinstall the fender on the motorcycle using the screws that were removed in STEP 2; routing the wires from the accents on the outside of the fork and secure to the brake lines with the included cable ties as shown in [PIC. 6](#); making sure that the wires are away from any moving parts or pinch points.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 15 Open the fairing pocket lids, and remove the four trim clips by pushing in on the center pins, and then pulling the clips out. Set the trim clips aside, as they will be used to reinstall the fairing pocket. ([PIC. 7](#))





STEP 16 Remove the fairing pockets by pulling them straight up and out.

STEP 17 Route the wires from the right side accent piece towards the right side pocket and the left side accent towards the left side pocket through the inner fairing as shown in [PIC. 8](#).

STEP 18 Route wires from the fairing pockets towards base of mirror as shown in [PIC. 8](#).

STEP 19 Locate the wiring harnesses by the base of the mirrors as shown in [PIC. 9](#); disconnect the connectors and install a Y-adapter from the hardware kit on the clutch and brake sides.

-cont.-

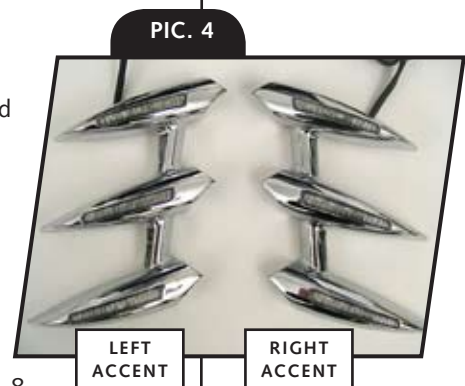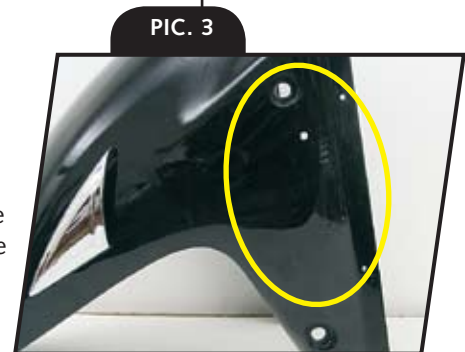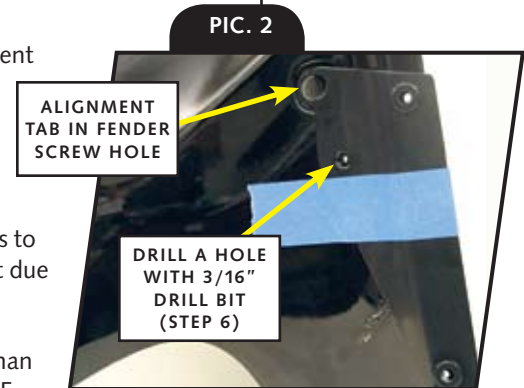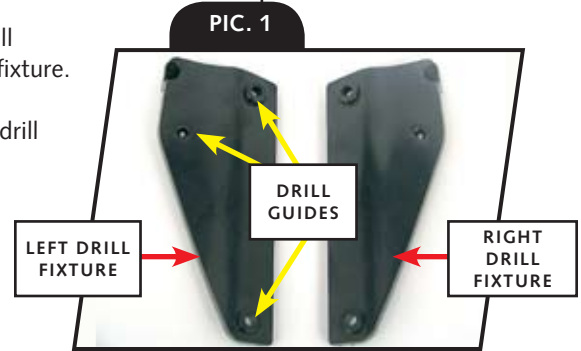

PAGE

2

NOTE: On '06-up Models require the installation of Küryakyn P/N 7300 (not included) for plug and play installation (see PIC. 10).

STEP 20 Start the male adapter from the hardware kit in one of the pigtails from the y-adapter as shown in PIC. 11.

STEP 21 Insert the wires from the tower accent into the male adapter so that the wire colors from the tower accent match those of the pigtail (see PIC. 11).

STEP 22 Remove the male adapter from the pigtail, and push the wires fully into the adapter, ensuring that they are fully engaged.

STEP 23 Plug the adapter into the pigtail.

STEP 24 Repeat STEP 20 through STEP 23 for the other side.

STEP 25 Reinstall the fairing pockets that were removed in STEP 15.

Ride On!

