



INSTALLATION

REAR FENDER ACCENTS for TRI-GLIDE 7217

PARTS INCLUDED

- 2 Rear Fender Accents—Leading Edge
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Masking Tape, Non-Permanent Marker, Tape Measure


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Kuryakyn recommends "mocking up" components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

STEP 2 Remove any grease or debris from the front of both fenders with soapy water and a clean rag; rinse and allow the area to dry completely. PIC 1 Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

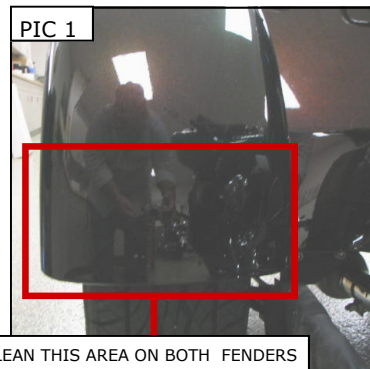

THOROUGHLY CLEAN THIS AREA ON BOTH FENDERS

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




kuryakyn.com

STEP 3 Hold one of the Accents up to one of the fenders. There is a lip on the bottom of the Fender Accent that will rest against the bottom edge of the rear fender. Apply a piece of masking tape to the front of each fender directly above the top of the Accent. PIC 2 Using a tape measure, mark the center of each fender on the masking tape.

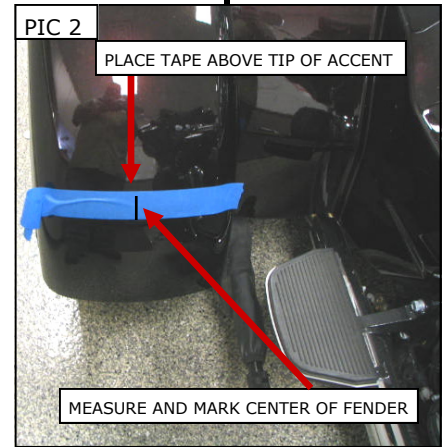


STEP 4 Using a piece of masking tape, attach each Fender Accent to the front of the fenders. PIC 3 Center the top of each Accent to the mark made in Step 3. Holding the Accent tight to the bottom edge of the fender, use masking tape or a non-permanent marker to mark the side locations of the Accent.

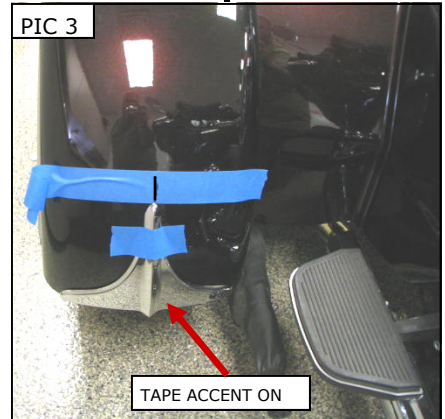

STEP 5 Step back from the Trike and ensure that the Accents are correctly located in the center of the fenders. PIC 4 Make any needed adjustments to the Accents and reference marks.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Remove one of the Accents. Rub the backing on the adhesive strip to activate the adhesive. Remove the adhesive backing. Using the reference marks made in Step 4, press the Fender Accent into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. PIC 4 Repeat for the other fender.

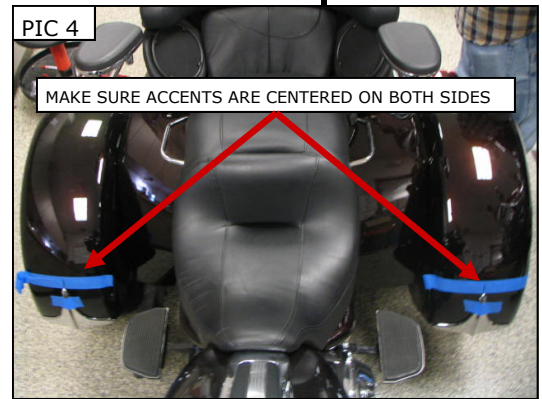

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.