



INSTALLATION

LED TURN SIGNAL BAR FILLER PANEL SMOKE 3153

PARTS INCLUDED

- 1 Smoke LED Filler Panel
- 1 Hardware Kit including:
 - 4 Cable ties
 - 1 Dielectric Grease
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY


ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, combination wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** On the inside of the rear fender, remove the two bolts that secure the taillight bar. Be sure you have a towel or rag to cover the rear fender (painted surface). Set the bolts aside for reinstallation of the light bar.
- STEP 3** Gently push the rubber grommet out of the fender from the back. You will eventually route the filler panel light in this grommet.
- STEP 4** On the backside of the new filler panel, loosen the two outer fasteners clips. (See Pic 1) Rotate these clips to the center of the light. Leave a little tension on the clips so they do not rotate around while installing the panel to the light bar. These clips are used to secure the filler panel to the light bar.

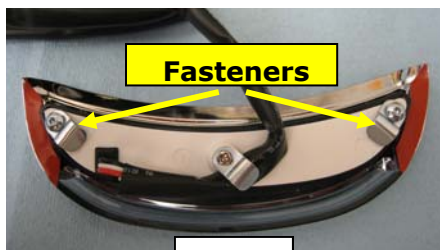

PIC. 1

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 5 While holding the light bar, take the new turn signal filler panel and route the wires down the back side of the light bar and through the grommet hole in the fender. Place the filler panel on top of the light bar and gently slide it towards the front side of the bar (or away from the fender). Make sure the panel is spaced evenly on the light bar.
With masking tape, make marks necessary to aid alignment of the new filler panel
Make sure the corners of the filler panel will not hit the fender when the turn signal bar is reinstalled to the rear fender

STEP 6 Clean the light bar with the supplied alcohol pad.

ATTENTION! The area of installation must be free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 7 Once you have your marks you need for the final installation, remove the filler panel. Rub the tape backing on the backside of the filler panel with your fingernail.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 8 Remove the backing and line up marks made in STEP 5. Make sure the corners of the filler panel will not contact the fender when the turn signal bar is fully tightened. When positioned, press firmly down on the panel for one full minute. Full bonding will happen in 24 hours.

STEP 9 On the new turn signal filler bar, slide the fastener clips over to lock the filler bar to the taillight bar. Tighten the two button head cap screws that secure the fastener clips. Pic. 1

STEP 10 Take the wire from the new turn signal filler panel and route it next to the other wire that goes through rubber grommet. Press the rubber grommet back in to place from the outside of the fender. You may have to wiggle the grommet into the hole by grabbing it on the inside of the fender. (Pic 2)



STEP 11 Let the wire rest on the floor; reinstall the stock rear taillight bar with the hardware that was removed in step 2.

STEP 12 Tighten all fasteners.

STEP 13 Remove the left side saddlebag and side cover to gain room to route the wire.

STEP 14 Route the wire from the signal filler panel next to the rear signal wire that runs from the lower fender to the side cover. Use the provided cable ties to secure the wires together.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.



STEP 15 With side cover removed, attach the filler panel wiring to the unused stock wiring harness that is cable tied together. (The lead is about 2' in length when uncoiled) Pic 3

STEP 16 Place a small amount of dielectric grease on the sub harness plug.

STEP 17 Check light operation by turning on the key and pressing on the brake pedal. You will have a run light and a brake light. If you do not have both functions please refer to the wiring connector in the side cover.

STEP 18 Reinstall the side cover and saddlebag and tighten all fasteners.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires