

0 0 0 0

0 0 0 0

BAHN IGNITION SWITCH COVER '07-'13 TOURING

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAM-AGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAU-TIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.



MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 BAHN Ignition Switch Cover
- 1 VHB[™] Cover Adhesive
- 1 Alcohol Pad
- 1 Installation instructions

TOOLS SUGGESTED:

Warm soapy water and a clean rag, small flat blade screwdriver or pick tool




These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Remove the main fuse.

WARNING

TO PREVENT ACCIDENTAL VEHICLE START-UP, WHICH COULD CAUSE DEATH OR SERIOUS INJURY, REMOVE THE MAIN FUSE BEFORE PROCEEDING.

- **STEP 2** Refer to **PIC 1.** Using a small flat blade screwdriver or pick tool, remove the OEM emblem; discard the emblem, it will not be reused. The emblem must be removed for the Cover Adhesive to stick properly.
- **STEP 3** Refer to **PIC 1**. Using warm soapy water and a clean rag, remove all dirt and debris from the installation area; allow the area to dry completely. Wipe the installation area with the included Alcohol Pad to remove any wax or polish; allow the area to dry completely.

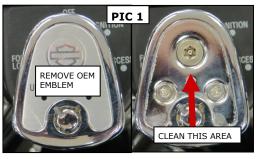

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kurvakvn.com

or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

> •The product must be properly installed, maintained and operated under normal conditions.

 Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

 Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

•Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

•Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn

454 County Road V V Somerset, WI 54025-9031

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kurvakvn.com



7237-21HD-0314



Ensure proper adhesion of this product. Clean the installation area of grease, oil, bugs, dirt and other debris (including wax and polish). Küryakyn WILL NOT issue a warranty for any improperly installed products.

Do not attempt this installation in temperatures below 50° F. Proper adhesive bonding ONLY occurs above 50° F.

STEP 4 Test fit the BAHN Ignition Switch Cover over the ignition switch. Note the alignment of the key holes for later; remove the Cover.

STEP 5 Locate the included VHB[™] Cover Adhesive. Rub the backing to activate the adhesive. Remove and discard one side of the backing. Refer to PIC
2. Apply the VHB[™] Cover Adhesive to the ignition switch; ensure that it is positioned in the recess in the switch. Press the Adhesive onto the switch for one full minute. Full bond will occur in 24 hours.

- **STEP 6** Remove and discard the remaining adhesive backing. Refer to **PIC 3**. Align the Cover and press it into place for one minute; full bonding will occur after 24 hours.
- **STEP 7** Reinstall the main fuse. Ensure proper ignition switch, neck lock, and key functions and clearance **BEFORE** operating the motorcycle.





TIPS FOR PROPER CARE:

Your new BAHN product is made out of anodized aluminum. Anodized aluminum requires special attention when cleaning. Some cleaning products or procedures can actually remove the anodized treatment which will lead to pitting in the aluminum.

Thoroughly clean the BAHN product often with a soft cloth, mild soap and water. Regular cleaning keeps contaminates from building up.

Rinse thoroughly with FRESH water.

Use only metal protection products that are formulated for anodized aluminum.

DO NOT USE bleach or chlorides to clean the BAHN product.

DO NOT USE products containing abrasives to clean the BAHN product. **Never** use steel or brass wool, wire brushes, polishing wheels, rubbing or polishing compounds on the BAHN product.

DO NOT USE concentrated alkaline based solutions to clean the BAHN product. Many detergents are alkaline based.

Ride On!

BAHN IGNITION SWITCH COVER '07-'13 TOURING INSTALLATION

Küryakyn

PAGE 2